

Arbiter 3 Rapid Fire Hell Controller from ConsolesandGadgets.co.uk

User Guide

We recommend using the Controller in LiteMode whilst you get used to your controller.

Congratulations on purchasing the World's Fastest Rapid Fire, Fact! We are sure you will love all the Arbiter 3 has to offer, and we are always welcome of suggestions on improvements and extra features if you find anything is missing, so don't hesitate to get it touch.

Getting to know your controller

At first you may be wondering how on earth the A3 works when there appears to be no extra buttons, holes, or anything out of the ordinary from the outside. Well, the A3 is totally stealth which means unless you know it is there and you want to use it, you wouldn't otherwise know it was there.

The A3 is turned on and configured primarily with the 'Sync' button and 'RT' trigger, with more advanced features described later using other buttons too.



One feature that makes the A3 so powerful is the ability to totally change its list of modes, effectively making the chip like a whole new product. For example some chips on the market have modes specifically for Gears of War games and that is it, other chips are specific to Call of Duty, others a general all-rounder's, but no other chip has the ability to be all of those in one. This is what the A3 'Chip Select' is. You can change the A3 into a Gears of War specific controller and at the push of a button change it to a Call of Duty specific controller, and again to an all-out 70+ mode controller!

1. Lite Chip (14 mode)
2. Full Chip (76 mode)
3. Arbiter 2 Chip (turn the A3 back into the classic A2!)
4. GOW3 Chip (GOW3 modes)

So, the first thing to do is to make sure your controller is set to be the chip you want it to be. To do this make sure your controller is turned off (but has the battery in still).

To select the Full or Lite chip all you do is hold down the Sync button for 3 seconds. When you do this you will notice the 4th player light will respond. If the A3 has just gone into Full chip then the light will come on once and go off again. If the A3 has just gone into Lite chip then the light will flash 4 times.

To select Full or Lite mode, hold the sync for 3 seconds. Each time it will toggle between Full/Lite.

To select Arbiter 2 mode, hold the A button and hold sync for 3 seconds.

To select GOW 3 mode hold the B button and hold sync for 3 seconds.

You will know what chip you are in because each time you hold the sync it will flash the 4th LED.

1 flash is Full Mode, 2 flashes is Arbiter 2 Mode, 3 flashes is GOW3 Mode, 4 flashes is LiTE Mode.

Once you are in that chip select, that is it, you are good to go and don't have to change it until you want to change chips, even after the battery is removed. So select your desired chip once, and then start using it. We recommend basic LiTE mode to begin with, which is what all controllers are setup to be as default.

IMPORTANT: Remember you can only switch the chip modes when the controller is turned off!

Selecting Modes

To select a mode, turn the controller on, hold RT and tap the sync button however many times for the mode, then release RT. So to select Mode 11 you would hold RT, tap sync 11 times, and then release RT. The light will flash while pressing sync, and then when releasing RT will flash back the mode number also to confirm you are doing things correct. Slow flashes = 10, fast flashes = 1, so mode 11 is one slow flash, one fast flash.

In Full mode only, because there are 70+ modes you don't want to be pressing sync 70 times, instead of just holding RT, each mode section has "activator buttons" so you can get there quicker. For example a Drop Shot + Aim section has (RT+LT+B) in the title then 10 modes in that section. This means to get to say mode 6 within that, instead of holding RT, you hold RT and LT and B, then tap sync 6 times, then wait 1 second and release the three buttons. If you release them too quick the controller will disconnect so make sure you just wait a second.

LiTE Chip Mode

1. Ultra Fire
2. Rapid Fire + Aim
3. Rapid Fire (3 Burst)
4. Ultra Fire + Drop Shot (LT Cancellation)
5. Drop Shot + Aim (LT Cancellation)
6. Rapid Fire + Drop Shot + Aim (LT Cancellation)
7. Ultra Fire + Jump Shot (LT Cancellation)
8. Jump Shot + Aim (LT Cancellation)
9. Rapid Fire + Jump Shot + Aim (LT Cancellation)
10. Combi Mode (Press LT: Rapid Fire, Press RT: Aim)
11. Rapid Fire + Auto-Fast Reload + Aim
12. Dual Trigger
13. [User Programming Mode](#)
14. Quick Scope (3 Burst) **Elite Package ONLY**

Arbiter 2 Chip Mode

1. Ultra Fire
2. Auto Aim
3. Rapid Fire + Auto Aim
4. Rapid Fire
5. Combi Mode (Press LT: Rapid Fire, Press RT: Auto Aim)
6. Rapid Fire + Auto Aim (5 Shot Burst)
7. Rapid Fire (5 Shot Burst)
8. Rapid Fire + Aim
9. Dual Trigger
10. [User Programming Mode](#)

Gears of War 3 Chip Mode

1. Lancer & Scorcher + Fast Reload
2. Retro Lancer + Fast Reload
3. Gnasher + Fast Reload
4. Snub & Boltok + Fast Reload
5. Hammerburst + Fast Reload
6. Sawn Off + Fast Reload

Full Chip Mode

RAPID FIRES (RT)

1. Rapid Fire
2. Rapid Fire GOW
3. Rapid Fire GTA + Aim
4. Ultra Fire
5. Dual Trigger
6. Aim
7. Rapid Fire + Aim
8. Rapid Fire 3 Burst
9. Ultra Fire + Drop Shot + Aim (LT Cancellation)
10. [User Programming Mode](#)

DROP SHOTS (RT + B)

11. Drop Shot
12. Rapid Fire + Drop Shot
13. Ultra Fire + Drop Shot
14. Drop Shot (LT Cancellation)
15. Rapid Fire + Drop Shot (LT Cancellation)
16. Ultra Fire + Drop Shot (LT Cancellation)
17. Drop Shot + Fast Reload
18. Drop Shot + Auto-Fast Reload
19. Rapid Fire + Drop Shot + Fast Reload
20. Rapid Fire + Drop Shot + Auto-Fast Reload

DROP SHOTS + AIM (RT + B + LT)

21. Drop Shot + Aim
22. Rapid Fire + Drop Shot + Aim
23. Drop Shot + Aim (LT Cancellation)
24. Rapid Fire + Drop Shot + Aim (LT Cancellation)
25. Drop Shot + Fast Reload + Aim
26. Drop Shot + Auto-Fast Reload + Aim
27. Rapid Fire + Drop Shot + Fast Reload + Aim
28. Rapid Fire + Drop Shot + Auto-Fast Reload + Aim
29. Drop Shot + Auto Aim
30. Rapid Fire + Drop Shot + Auto Aim

JUMP SHOTS (RT + A)

31. Jump Shot
32. Rapid Fire + Jump Shot
33. Ultra Fire + Jump Shot
34. Jump Shot (LT Cancellation)
35. Rapid Fire + Jump Shot (LT Cancellation)
36. Ultra Fire + Jump Shot (LT Cancellation)
37. Jump Shot + Fast Reload
38. Jump Shot + Auto-Fast Reload
39. Rapid Fire + Jump Shot + Fast Reload
40. Rapid Fire + Jump Shot + Auto-Fast Reload

JUMP SHOTS + AIM (RT + A + LT)

41. Jump Shot + Aim
42. Rapid Fire + Jump Shot + Aim
43. Jump Shot + Aim (LT Cancellation)
44. Rapid Fire + Jump Shot + Aim (LT Cancellation)
45. Jump Shot + Fast Reload + Aim
46. Jump Shot + Auto-Fast Reload + Aim
47. Rapid Fire + Jump Shot + Fast Reload + Aim
48. Rapid Fire + Jump Shot + Auto-Fast Reload + Aim
49. Jump Shot + Auto Aim
50. Rapid Fire + Jump Shot + Auto Aim

AUTO AIMS (RT + LT)

51. Combination Mode (LT = Rapid Fire, RT = Aim)
52. Auto Aim
53. Auto Aim on LT
54. Fast Reload + Auto Aim
55. Auto-Fast Reload + Auto Aim
56. Rapid Fire + Auto Aim
57. Ultra Fire + Auto Aim
58. Rapid Fire + Fast Reload + Auto Aim
59. Rapid Fire + Auto-Fast Reload + Auto Aim
60. Ultra Fire + Auto-Fast Reload + Auto Aim

FAST RELOADS (RT + X)

61. Fast Reload
62. Auto-Fast Reload
63. Rapid Fire + Fast Reload
64. Rapid Fire + Auto-Fast Reload
65. Fast Reload + Aim
66. Auto-Fast Reload + Aim
67. Rapid Fire + Fast Reload + Aim
68. Rapid Fire + Auto-Fast Reload + Aim
69. Rapid Fire GOW + Fast Reload GOW
70. Rapid Fire GOW + Auto-Fast Reload GOW

SPECIALS (RT + LT + X)

71. 2SPS DMR
72. Ultra Fire Alternative
73. Combi Legacy (LT = Rapid Fire, RT = Auto Aim)
74. Quick Scope
75. Quick Scope (3 Burst)
76. Quick Scope + Rapid Fire

Elite Package ONLY

* The buttons in brackets by each sub-section are the activator buttons. To get into the modes within that section, hold those buttons, tap sync the correct number of times, keep them pressed for a second after that, then release them.

So to select Rapid Fire + Jump Shot (Mode 32) hold RT and A button, then tap sync twice (only twice as it is mode 52, but you are 'jumping' the previous 49 modes by holding the RT + A), keep buttons pressed for a second, then release. The LED will flash 5 times slowly, then 2 times fast to indicate you are in mode 52.

Adjusting Speed

One of the best things about the Arbiter 3 is every single mode that uses Rapid Fire can have its speed completely customized for future proof games and perfect timing anywhere from 5 to 250 shots per second.

As default the speed of rapid fire is what we call Speed Mode 30. The slowest speed is Speed Mode 1, and fastest is Speed Mode 50 which is over 250 shots per second!

To adjust the speed of all modes on the chip, go into the User Programming Mode, and you will notice the light will turn on and stay on. You are now ready to adjust the speed. You will start in whatever speed you were currently in, so if you haven't done this before it will be Speed Mode 30.

To increase the speed, simply press and release LT and the light will also flash once to indicate an increase. You will now go to Speed Mode 31 (if you were in 30 to start with). You can test this speed on the fly by holding RT. To continue increasing the speed just press LT again and again until you get to where you want. If you go too far, or want to slow down the speed (i.e. go backwards one in the Speed Mode) then hold A while you press LT and instead of speeding up 1 it will slow down 1.

Once you are happy with your speed tap the sync button with no triggers or buttons pressed, and it will flash back to you the Speed Mode you are in. So for Speed Mode 37 it would flash 3 times slowly and then 7 times fast. This speed is then hard saved into the chip and will be remembered even when the battery is removed - you can now select any mode that uses Rapid Fire and see the speed has totally changed.

If you get a bit lost as to what speed your chip is now in you can reset it to Speed Mode 30 by going into User Programming Mode and holding the B button for 2 second. The LED will flash 3 times then go off. The speed is now reset and you can go to any mode you like as before.

HINT: Try Speed Mode 45 for Modern Warfare 3 on Snipers and Pistols!

NOTE: If you lose track of the speed, you can easily reset the chip to Speed Mode 30 by going into User Programming Mode and then holding the B button for 2 seconds. The light will flash 4 times to confirm.

Trigger Level Adjusting Speed

If you find using LT to adjust speed is a little slow, you can toggle into trigger level speed adjusting. Enter User Programming Mode as normal, but once in that mode, hold down the 'X' button for a few seconds and the light will flash a few times to indicate you are now in trigger level mode.

Now the faster you press RT the quicker the gun will fire. Pull the trigger down to the speed you would like and with it held there, tap 'Sync' to set the speed.

Auto-Run Elite Package ONLY

One of the little hidden extras of the A3 is a new feature called Auto-Run. How annoying is it that you have to click in the left thumb stick all the time to run in games like Call of Duty? Not only that but it increases the wear on your controller. Not any more, not with Auto Run!

To turn on/off Auto-Run, with your controller turned on, hold down the left thumb stick (click it down) and then tap the Sync button. When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you do this it will switch between being turned on or off. With Auto-run turned on, all you need to do to start running is pull LT trigger. Now when you push up on the left thumb stick you will instantly run continually. To de-activate a run just press any other button such as A, B, X, Y, RT, RB etc... To activate it again and start running just pull LT again.

Tactile Layout / Battlefield 3 Elite Package ONLY

Some users like to use alternate button layouts for the games. For Call of Duty the popular alternative is Tactile Layout, which swaps the Drop button and Knifing button (B and Right Thumb) around, so B will knife and the right thumb will drop. For battlefield 3 the dropping is by default the right thumb stick.

Obviously this causes problems with the Drop Shot feature. To enable B-Remapping, turn off your controller but have the battery in, then hold down the right thumb stick (click it down) and tap the Sync button. The light will flash twice to say it is enabled, and once to say it is disabled. Each time you do this it will switch between being turned on or off.

Now when you use Drop Shots with remapping turned on, it will use the right thumb stick for any B actions.

Features Explained

As many users might not be familiar with common terms used in the modified controller industry, and as many have been created by the Modiiify Team and only exist in the A3 chip, find below explanations of what each terminology means.

Rapid Fire

Rapid fire is when you press the RT trigger to fire your weapon and the chip rapidly fires the trigger simulating you pressing the RT trigger over and over very fast.

Ultra Fire

Ultra fire is an enhancement of Rapid Fire to make semi and fully automatic guns fire even faster. This mode is only available for Call of Duty games up to Black Ops. Any CODs that don't support it will just cause the gun to swap weapons very fast.

Dual Trigger

Also sometimes called Akimbo, Dual Trigger is Rapid Fire but for dual wielding guns like Dual Pistols in Call of Duty and dual wielding in Halo's etc... Just pull the fire trigger to rapid fire both triggers. If you have a single weapon in this mode you can hold LT (to aim) before pulling RT to fire and it will rapid fire the single shot weapon ok too.

Burst Fire

Burst fire is just Rapid Fire but with a limited number of bullets. So 3 Burst will rapidly fire 3 shots then stop until you release the trigger. Perfect for snipers and ammo preservation.

Quick Scope Elite Package ONLY

With quick scope, as soon as you look down the sight by holding LT, the chip will automatically hold your breath for you to steady your aim, which you would usually have to click in the left thumb stick to do. This makes scoping much easier.

LT Cancellation

For Jump and Drop Shot modes, you don't always want to drop or jump, for example if you are behind a window. To prevent the drop or jump, in any mode with LT Cancellation, if you are already pressing LT (looking down the sight) when you fire you won't drop or jump.

Aim & Auto Aim

Any modes that have 'Aim' activated mean that by pulling RT to fire, it will automatically pull LT for you so you don't have to manually aim down the sight. One less thing to think about.

Auto aim is similar, but for offline games that have an 'aim assist' option, the Auto Aim will automatically track the enemies for you so you don't even need to aim at them!

Drop Shot

Still the only chip on the market to do Drop Shot fully and not do half a job. When you pull the RT the chip will instantly and automatically drop you to the floor while doing any other action on the mode you are in (such as aim for you and rapid fire), then as soon as you release RT it will stand you back up!

Jump Shot

This is identical to drop shot but instead of dropping to the floor, you will continually jump.

Fast Reload

Fast Reload and Auto Fast Reload work specifically on Black Ops and Gears of War 2 & 3. For Fast Reload, when you reload your weapon, the A3 will automatically 'glitch' on Black Ops about half a second before finishing allowing you to finish reloading that little bit quicker. This works for FN Fal, Famas and a few others.

For Gears of Wars games the Fast Reload is perfectly timed Active Reloads when you press reload.

Auto-Fast Reload is the same as Fast Reload but you don't have to press reload, you just let go of RT after firing, and it will reload for you.

What is...?

As we wanted to keep the manual nice and compact and not over complicate things, information on things like “What is drop shot?” or “What is LT Cancellation” and so on, we describe all the features and definitions over at www.consolesandgadgets.co.uk so just pop over there for detailed descriptions of what all things like drop shot, jump shot and auto aim all refer too.

Any questions feel free to drop us an email at sales@consolesandgadgets.co.uk

Elite Package ONLY

Elite Mode is an added extra that can be added to any Arbiter 3 Controller for an additional fee. It gives you a few added extras including Auto-Run, Quick Scoping and Tactile / BF3 Remapping. If you purchased your Arbiter 3 already it can be upgraded to an Elite for a small price, or if you have still to purchase a Controller look out for the “Elite Package” add-on as an optional extra.